Instruction Manual
P1885E/EN
2008-04

Cleco® 80PTHD…

Pulse shut-off nutsetter

COOPER Power Tools

For additional product information visit our website at http://www.cooperpowertools.com

Notes on this instruction manual

The instruction manual has the following purposes:

- It provides important instructions for safe and effective operation.
- It describes the function and operation of the pulse shut-off nutsetter.
- It serves as a reference work for technical data, service intervals and spare part orders.
- It points out options.

In the text:

80PTHD…	stands for all of the designs of the pulse shut-off nutsetter described here.
➔	Identifies instructions to be followed.
•	Identifies enumerations.
<…>	Identifies an index number, see 8 Spare parts, page 25

In graphics:

	Identifies movement in a direction.
	Identifies function and force.

Disclaimer:

Cooper Power Tools reserves the right to modify, supplement or improve this document or the product without prior notice. This document may not be reproduced in whole or in part in any way, shape or form, or copied to another natural or machine-readable language or to a data carrier, whether electronic, mechanical, optical or otherwise, without the express permission of Cooper Power Tools.

Contents

1 Safety 5

1.1 Warnings and notes 5
1.2 Basic requirements for safe working practices 6
1.3 Operator training 6
1.4 Personal protective equipment 7
1.5 Designated use 7
1.6 Noise and vibration 7

2 Items supplied 7

3 Product description 8

3.1 Operation and functional elements 8

4 Before initial operation 9

4.1 Ambient conditions 9
4.2 Air supply 9
4.3 Connect the tool 9
4.4 Setting up the tool 10

5 Troubleshooting 12

6 Maintenance 13

6.1 Service schedule 13
6.2 Activating the reserve oil 15
6.3 Refilling oil 16

7 Repair instructions 19

7.1 Disassembling the motor unit 19
7.2 Disassembling the throttle valve 19
7.3 Disassembling the pulse unit 20
7.4 Assembling the motor unit 20
7.5 Assembling the pulse unit 24

8 Spare parts 25

8.1 Pistol grip 26
8.2 Motor unit 935635 28
8.3 Pulse unit 30
8.4 Equipment order list 32

9 Technical data 33

9.1 Dimensions in mm 33
9.2 Performance Data..... 33

10 Service 34

11 Disposal 34

1 Safety

1.1 Warnings and notes

Warning notes are identified by a signal word and a pictogram:

- The signal word describes the severity and the probability of the impending danger.
- The pictogram describes the type of danger.

WARNING!

Indicates a potentially hazardous situation
which, if not avoided, could result in death or serious injury.

CAUTION!

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property and environmental damage. If this warning is not observed, injuries, property or environmental damage may occur.

NOTE

General notes
include application tips and particularly useful information but no hazard warnings.

1.2 Basic requirements for safe working practices

You should read all instructions.
Failure to observe the instructions listed below can result in serious injuries.

CAUTION!

- → Before initial operation, check that the suspension bail is properly fastened to the balancer.
- → Work with a maximum working pressure of 101.5 psi (700 kPa) (measured as the air inlet tube of the tool).

- → If you hear unusual noises or vibrations, switch off the tool immediately.
  Shut off the air supply immediately.
- → Before carrying out repairs, adjusting the torque or replacing screw bits, disconnect the tool from the compressed air line.
- → The compressed air line must be depressurized before disconnecting it.
- → Never use the air hose to hold, raise or lower the tool.
- → Air hoses, the suspension bail and fittings must be regularly checked for damage and wear. Replace if necessary.

- → Always carry out assembly according to Chapter 8 Spare parts, page 25.
- → Use only accessory parts authorized by Cooper Power Tools
  (see product catalog).
- → Adjust the torque using the provided hex wrench only. Never use an angular wrench.
- → Only use screw inserts for machine-controlled fastening tools.
- → Make sure that the screw bits are securely inserted.
- → Inspect screw bits for visible damage and cracks.
  Replace damaged screw bits immediately.

- → The operation, maintenance and repair conditions set forth in the operating instructions must be observed.
- → Follow generally valid and local safety and accident prevention rules.

1.3 Operator training

Operators must be trained in correct handling of the tool. The user must make the operating manual available to the machine operator and ensure that the operator has read and understood it. The tool may be connected, used, serviced and repaired by qualified persons only. The tool may be repaired by authorized technicians only.

1.4 Personal protective equipment

- Wear the protective goggles to protect against sprays of metal splinters and fluids.
- Wear gloves to protect against skin irritation in case of direct contact with oil.

Danger of injury by being wrapped up in and caught by machinery

- Wear a hairnet.
- Wear close-fitting clothing.
- Do not wear jewelry.

Sound level in the area of the user > 80 dB(A), danger of hearing damage

- Wear hearing protection.

1.5 Designated use

The 80PTHD… is designed exclusively for fastening and releasing threaded fasteners.

- Do not use it as a hammer.
- Do not open it or modify it structurally.
- Do not use it in areas where there is a risk of explosion.

1.6 Noise and vibration

Sound pressure level Lp according to DIN EN ISO 15744
Free speed: < 82 dB(A) for n ≤ 6000 rpm

Vibration values according to DIN EN ISO 20643
Free speed: ahv <6.56 ft/s² (2.0 m/s²) for n ≤ 6000 rpm
Load: ahv <14.76 ft/s² (4.5 m/s²)

2 Items supplied

Check shipment for transit damage and ensure that all items have been supplied:

1 80PTHD…
1 This instruction manual
1 Declaration of Conformity
1 Size 2 hex wrench

3 Product description

3.1 Operation and functional elements

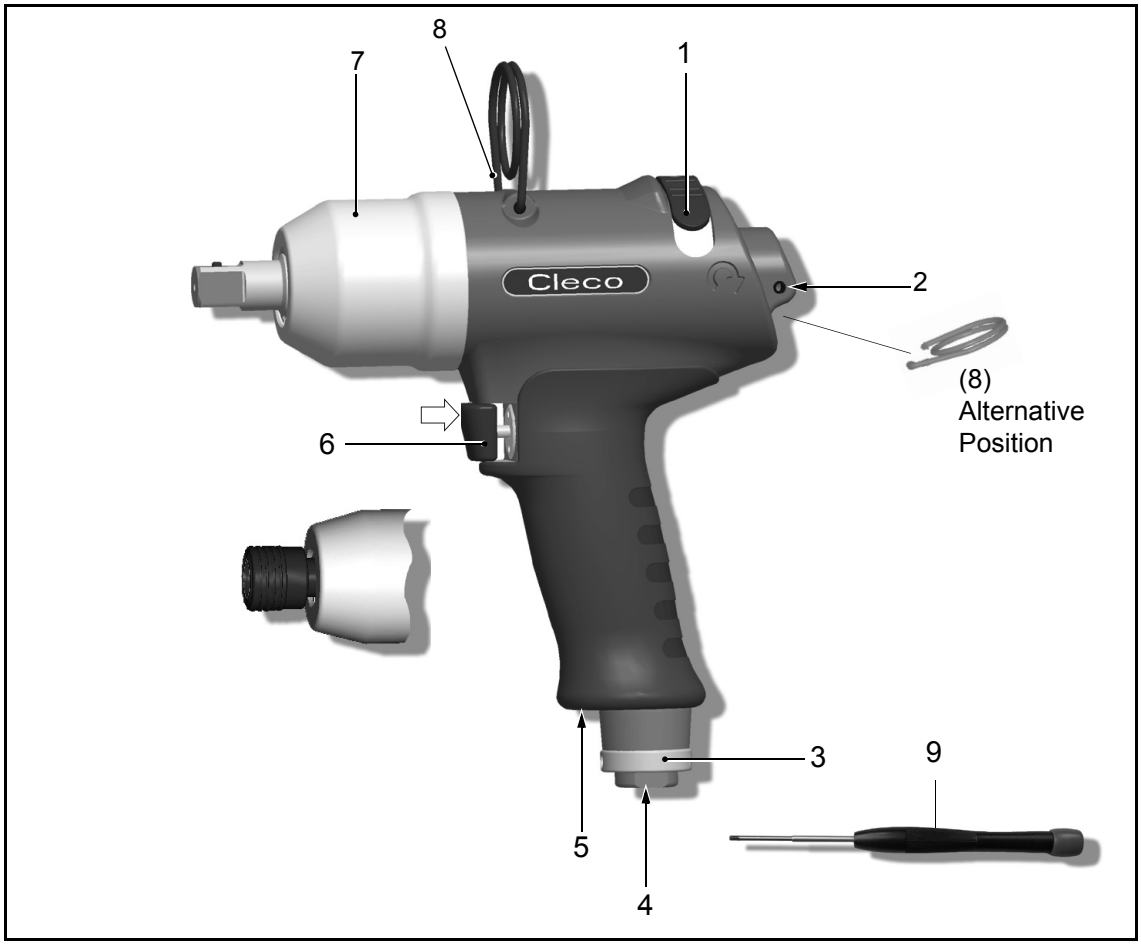

Pos.	Designation
1	Reverse switch
2	Torque adjustment, siehe 4.4.1 Setting the torque, page 10
3	Speed adjustment, siehe 4.4.2 Changing the speed, page 11
4	Air inlet
5	Connection for Pneumatic Torque Verifier TVP100, signal connection kit, order no. 934918 (optional)
6	Start button
7	Reserve oil adjustment, see 6.2 Activating the reserve oil, page 15
8	Suspension bail
9	Size 2 hex wrench, order no. 935490

4 Before initial operation

4.1 Ambient conditions

Ambient temperature	41 °F (5 °C) to a maximum of +104 °F (+40 °C)
Permissible relative humidity	25 to 90 %, non-condensing

4.2 Air supply

Parameter	Data
Air hose	Inner diameter 1/2" (ø 12,5 mm), maximum length 16.4 ft (5 m)
Working pressure range	58 to 101.5 psi (400 to 700 kPa) Recommended: 90 psi (620 kPa)
Compressed air	Air quality according to ISO 8573-1, quality class 2.4.3 The compressed air must be clean and dry.

NOTE

To attain consistent results, maintain a constant working pressure using a 1/2" service unit consisting of filter, pressure regulator and lubricator.

- ➔ The inside of the air hose must be free of residue; clean it if necessary.
- ➔ Spray a few drops of light oil into the air inlet tube.

Oils according to DIN 51524 / ISO 3498

Order no.	Packaging unit liter	Designation	ARAL	BP	elf	ESSO	INA	Mobil	Klüber	SHELL
933090	2	HL32	Aralub EE 100	Energol HL 32	Polyelis 32 Olna 32	Nuto H 32	Hydraol A 32	D.T.E.Oil Light Vactra Oil Light	Crukolan 32	Molina 32 Molina 22

4.3 Connect the tool.

CAUTION!

The air hose can come off by itself and whip around uncontrollably.

- ➔ Shut off the compressed air before making the connection.

- ➔ Connect the connection couplings to the tool and compressed air line properly.
- ➔ Activate the compressed air.

4.3.1 Testing

- ➔ Carry out a test in clockwise and counterclockwise rotation at maximum speed, see 4.4.2 Changing the speed, page 11.
- ➔ Check the speed at the output drive. Target: n > 6000 rpm.

4.4 Setting up the tool

The tool must be configured for the desired rundown.

4.4.1 Setting the torque

CAUTION!

Danger of injury from unintended startup.
Shut off the compressed air before adjusting the torque.

CAUTION!

Danger of injury from rotating hex wrench
Adjust the torque using the provided hex wrench only. Never use an angular wrench.

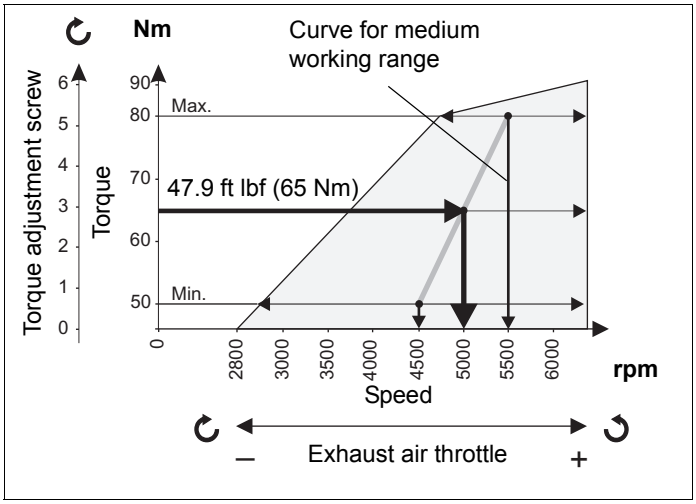

Abb. 4-1

Example settings:
47.9 ft lbf (65 Nm) rundown

- ➔ Approx. 3 turns of the torque adjustment screw
  Speed: 5000 rpm

1. Hold the output drive firmly.
2. Carefully push the size 2 hex wrench through the hole of the pistol grip housing until it reaches the torque adjustment screw ①.
3. Turn the torque adjustment screw and roughly set the required torque, see Abb. 4-1 , page 10.
   Total number of turns = 6.
4. Pull out the hex wrench.
   The hole closes automatically when the tool starts.
5. Carry out the rundown.
6. Check the shut-off mechanism worked properly, see 4.4.3 Measuring the torque, page 12.
7. In case of deviations, correct the torque setting
8. Repeat the rundown.

Abb. 4-2

4.4.2 Changing the speed

Requirement	Measure
Better shut-off accuracy – particularly for hard joints. Increase the number of pulses per rundown. Recommended number of pulses ≥ 6.	➔ Reduce the speed
Reducing the noise pressure level	➔ Reduce the speed
Reducing vibration	➔ Reduce the speed
Shortening the rundown time, particularly for soft joints.	➔ Increase the speed

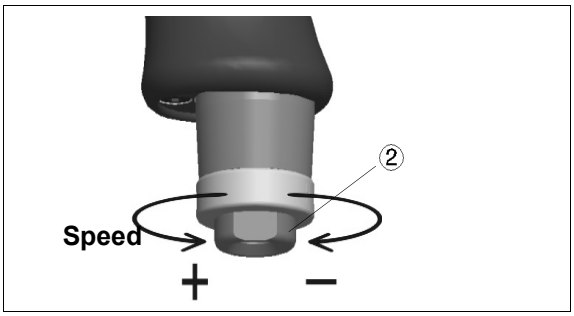

1. Unscrew the threaded pin using the size 2 hex wrench.
2. To reduce the speed, turn the exhaust air throttle ② clockwise.
3. To increase the speed, turn the exhaust air throttle ② counterclockwise.

Abb. 4-3

NOTE

A speed change may be carried out while the compressed air is activated.
After changing the speed, correct the torque if necessary;
see 4.4.1 Setting the torque, page 10.

4.4.3 Measuring the torque

We recommend carrying out a static torque measurement by retightening the rundown.

When carrying out a dynamic measurement using a transducer adapter, also carry out a static test, for example using a torque wrench (electronic).

4.4.4 Pulse frequency

The pulse frequency is set optimally for most applications. For special applications, such as an extremely hard joint and small torque, the pulse frequency can be increased at the factory, thus increasing the shut-off accuracy.

5 Troubleshooting

Error	Possible causes	Measures and remedies
Tool does not shut off	Torque set too high	➢ Reduce the torque setting, see 4.4.1 Setting the torque, page 10.
	Speed set too low	➢ Increase the speed, see 4.4.2 Changing the speed, page 11.
	Working pressure < 58 psi (400 kPa)	➢ Check the cross section of the hose and coupling: Inner diameter 1/2" (ø 12,5 mm), maximum length 16.4 ft (5 m). ➢ Increase the working pressure.
	Reverse button is not at the detent	➢ Turn the reverse button to the detent.
	Excessive transmission damping due to extension and worn socket	➢ Increase the speed, see 4.4.2 Changing the speed, page 11. ➢ Use a shorter or more rigid extension. ➢ Replace the socket.
	Insufficient oil in the pulse unit (no pulse build-up)	➢ See 6.2 Activating the reserve oil, page 15. ➢ See 6.2 Activating the reserve oil, page 15.
	Screen in the air inlet tube / muffler is dirty	➢ Clean or replace parts.
Insufficient shut-off accuracy	Number of pulses too low: < 6	➢ Reduce speed, number of pulses > 6.
	Adapter parts	➢ Replace adapter parts. ➢ Use extension and socket with guide diameter.
	Pressure fluctuations in the air network	➢ Use a pressure controller.
Fastening time too long: > 4 seconds	Joint too soft; self-locking nuts, drive screws	➢ Increase the speed. ➢ Use a pulse nutsetter with a higher capacity. ➢ Use a mechanical screwdriver.

6 Maintenance

CAUTION!

Danger of injury due to unintentional activation
– before service, disconnect the tool from the compressed air supply.

6.1 Service schedule

Regular maintenance reduces operating faults, repair costs and downtime.

Maintenance interval	Rundowns	Measures
W1	100,000	→ Check the suspension bail for functional safety. → Check the air hose for wear. → Check the square on the output drive for wear. → Check the air inlet for tight fit. → Check the housing of the pulse unit for tight fit. → Check the max. free speed.
W2	500,000	→ Oil change, see 6.3 Refilling oil, page 16. → Motor service kit, see 3) Part of motor service kit K1, order no. 935655, page 27. → Hydraulic service kit, see 3) Part of hydraulic service kit K2, order no. 935656, page 31. → Replace muffler, filter.
W3	1,000,000	Check individual parts and replace if necessary. → Suspension bail → Throttle valve → Exhaust air throttle → Motor → Pulse unit

This maintenance schedule uses values that are valid for most applications. For a specific service interval, see 6.1.1 Calculating a customer-specific maintenance plan, page 14.

Implement a safety-related maintenance program that takes the local regulations for repair and maintenance for all operating phases of the tool into account.

6.1.1 Calculating a customer-specific maintenance plan

A service interval **W(1,2,3)** depends on the following factors:

Factor	Value assumed in 6.1, "Maintenance plan"	Description
V	V1 = 100,000 V2 = 500,000 V3 = 1,000,000	Number of rundowns after a maintenance measure is prescribed by Cooper Power Tools.
T1	1.8 seconds	Specific rundown time, measured in life and endurance tests.
T2	2 seconds	Actual rundown time, depending on the hardness of the joint.
S	1; 2; 3	Number of shifts per day.
VS	750	Number of rundowns per shift.

T2, **S** and **VS** are variable factors and can differ depending on the specific application.

Example for service interval W2:

After 500,000 rundowns (V),
a specific rundown time of 1.8 seconds (T1)
with an actual fastening time of 3 seconds (soft joint) and
3 completed shifts per day and 750 rundowns per shift:

$$W(1,2,3) = \frac{V \times T_1}{T_2 \times S \times VS} \qquad W2 = \frac{500000 \times 1,8}{3 \times 3 \times 750} = 133(\text{days})$$

You have to carry out the maintenance measures marked W2 after an operating time of 133 days.

6.2 Activating the reserve oil

If pulse build-up stops, some of the oil in the pulse unit has been used up. The reserve oil must be activated. If the equalizing piston reaches the limit stop, oil must be refilled the next time (see 6.3 Refilling oil, page 16).

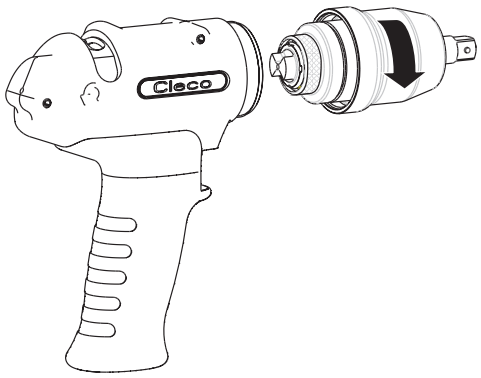

1.

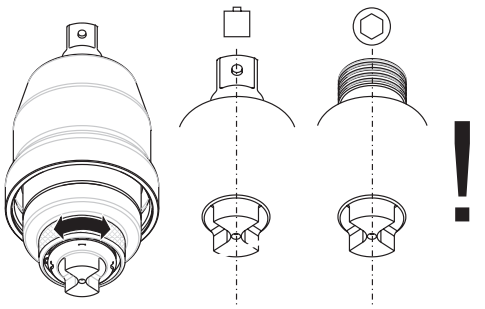

2. Align both ends as shown in the illustration.

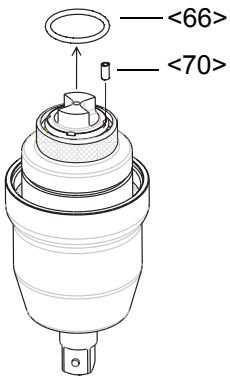

3.

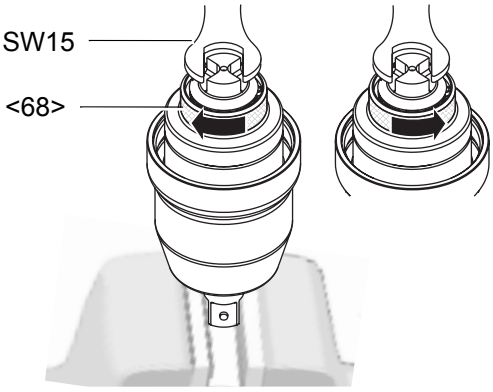

4. Turn <68> clockwise till the detent.
5. Turn <68> approx. 2,5 turns anticlockwise…

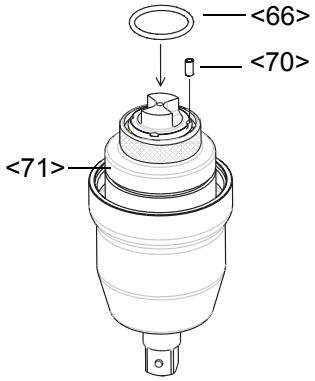

6. …until <70> can be reinserted again.

The reserve oil can be adjusted approx. 1 – 2 times until <71> is at the detent and <70> can still be reinserted.
If necessary, turn back to the next groove.

6.3 Refilling oil

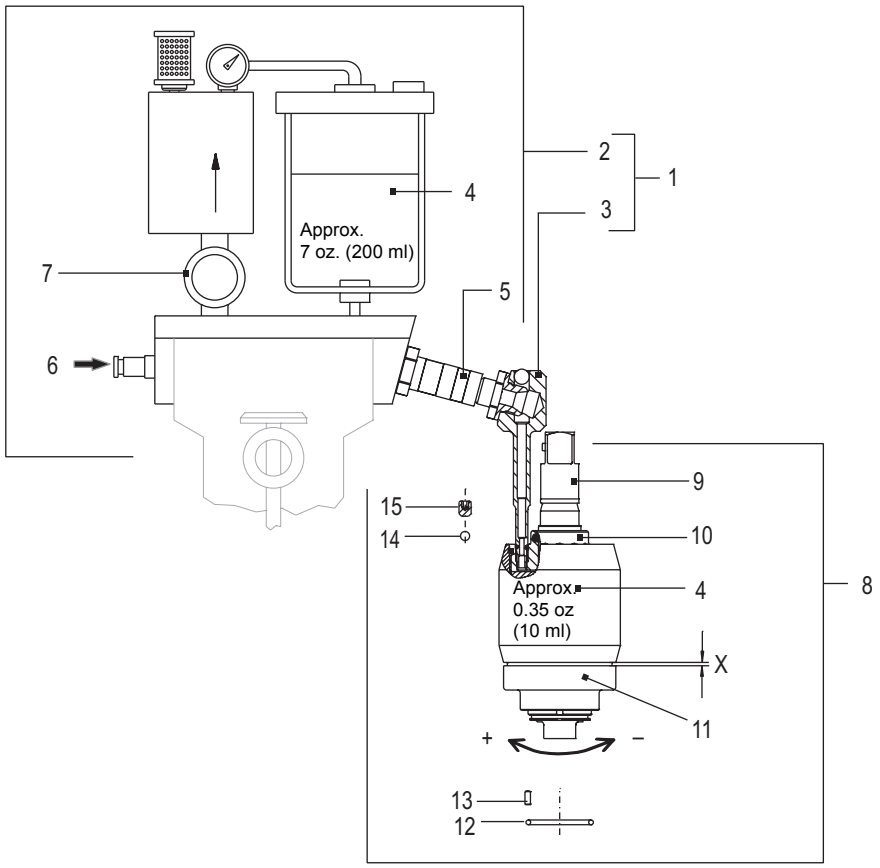

Item	Designation
1	Oil filling device asm.[1)]
2	Oil filling device without filling piece [1)]
3	Filling piece asm.[1)]
4	Oil order no. 925715, ESSO-UNIVIS HVI26, approx. 2.1 qt (2 liters), temperature 68 ±9 °F (20 ±5 °C)
5	Quick disconnect coupling
6	Working pressure 65 – 80 psi (450 – 550 kPa)
7	Shut-off valve
8	Pulse unit
9	Hydraulic rotor
10	Bearing ring
11	Equalizing piston
12	O-ring
13	Sleeve
14	Ball
15	Threaded pin

1) See 8.4 Equipment order list, page 32

1. Remove the threaded pin **15** and ball **14**.
2. Remove the O-ring **12** and sleeve **13**.
3. Align the output drive and claw as shown in the illustration, see 6.2 Activating the reserve oil, page 15.
4. Rotate the equalizing piston **11** clockwise as far as it will go until **X** = 0 (starting point).
5. Unscrew the equalizing piston **11** counterclockwise by 1,0 turns (reserve oil volume).
6. Connect the pulse unit **8** to the quick disconnect coupling **5** using the adapter.
7. Close the shut-off valve **7**.
8. Set the working pressure to approx. 73 psi (500 kPa).
9. Slowly open the shut-off valve **7** all the way until the gauge shows a negative pressure of –13 psi (–90 kPa).
10. Wait approx. 2 minutes until the number of vacuum bubbles has reduced significantly.
11. Close the shut-off valve **7** slowly. The gauge shows atmospheric pressure again. Missing oil is pushed into the pulse unit **8** .
12. Repeat steps 8 through 11 if necessary until the number of bubbles approaches zero.
13. Uncouple pulse unit **8**, unscrew the adapter and add a couple of drops of oil using the injector.
14. Mount the ball **14** and screw the threaded pin **15** into place (0.75+0.25 ft lbf, or 1 +0.3 Nm).
15. Turn the equalizing piston **11** another 2,5 turns counterclockwise, or slightly more if necessary, until the sleeve **13** can be inserted (oil compensation volume).
16. Install the sleeve **13** and O-ring **12**.

NOTE

Small air bubbles that become visible due to the high pressure during filling do not mean that the pulse unit is leaking.
The filling process is not impaired.

7 Repair instructions

Refer also to 8 Spare parts, page 25 and 8.4 Equipment order list, page 32

7.1 Disassembling the motor unit

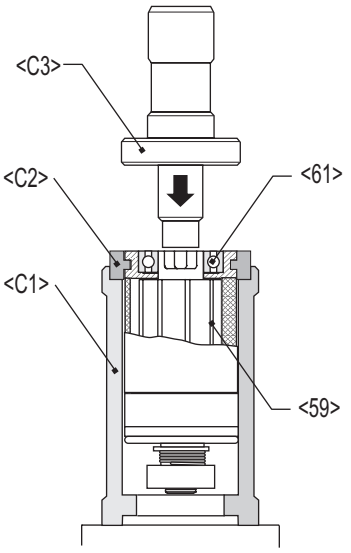

Changing blades

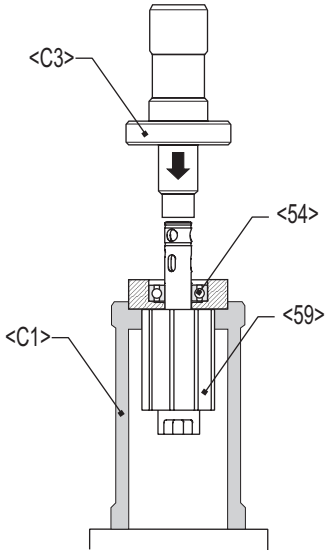

Changing bearing / rotor

7.2 Disassembling the throttle valve

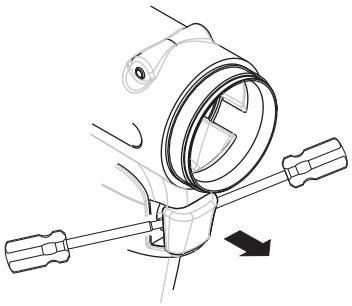

1.

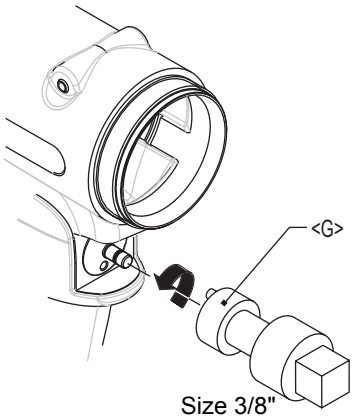

2.

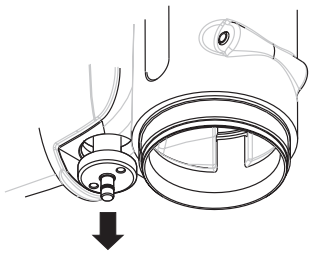

3.

7.3 Disassembling the pulse unit

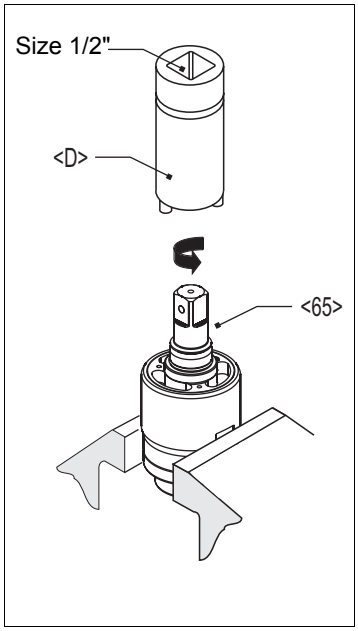

Abb. 7-1

CAUTION!

Skin irritation in case of direct contact with oil.
Wear protective gloves.

CAUTION!

Hydraulic blade is under spring pressure!
Wear protective goggles.

NOTE

Permitted only if filling is guaranteed with oil filling device, see 6.3 Refilling oil, page 16. The pulse unit must have cooled to room temperature.

7.4 Assembling the motor unit

CAUTION!

- Always carry out assembly according to the exploded drawing, see 8 Spare parts, page 25. Incorrect assembly causes uncontrollable reactions, such as unexpected startup or ejection of parts.
- Tighten all screwed joints of the tool carefully, according to the specifications.

NOTE

To prevent damage, lubricate the gaskets and O-rings using grease (order no. 914392) before assembly.

7.4.1 Assembling the end plate

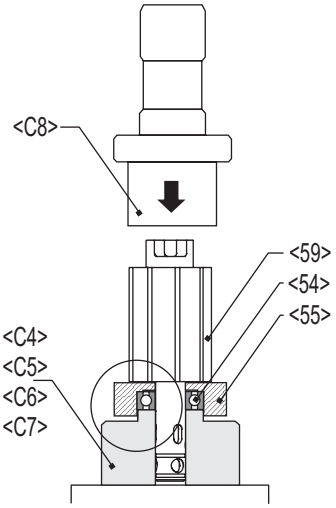

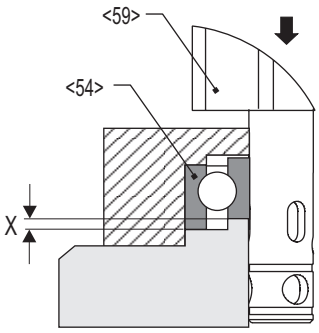

Dimension X = 0.00" to 0.00236"
(0.00 to 0.06 mm)

1. Press in <59>, see dimension X.

Test force
1.12 – 3.37 lbf (5 – 15 N)

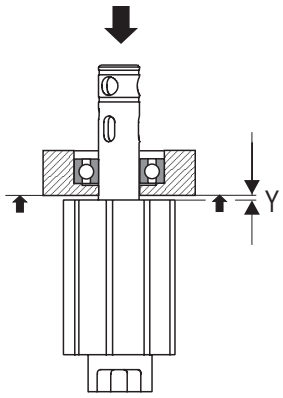

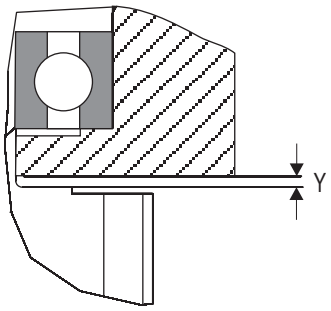

Dimension Y = 0.0002" to 0.0006"
(0.005 to 0.015 mm)

2. Check dimension Y.

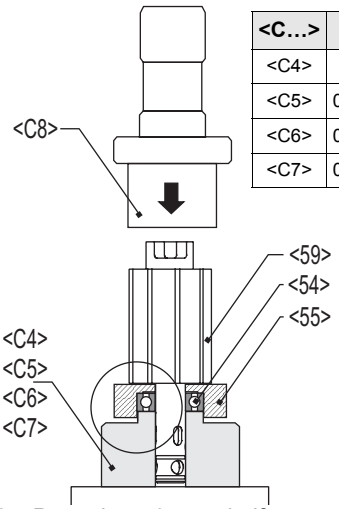

<C…>	Dimension X
<C4>	0.00
<C5>	0.00079" (0.02 mm)
<C6>	0.00158" (0.04 mm)
<C7>	0.00236" (0.06 mm)

3. Press in <59> again if nec., see dimension X.

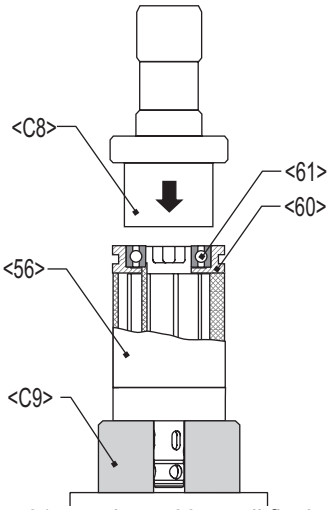

4. Press <61> against <60> until flush.

7.4.2 Assembling the shut-off piston

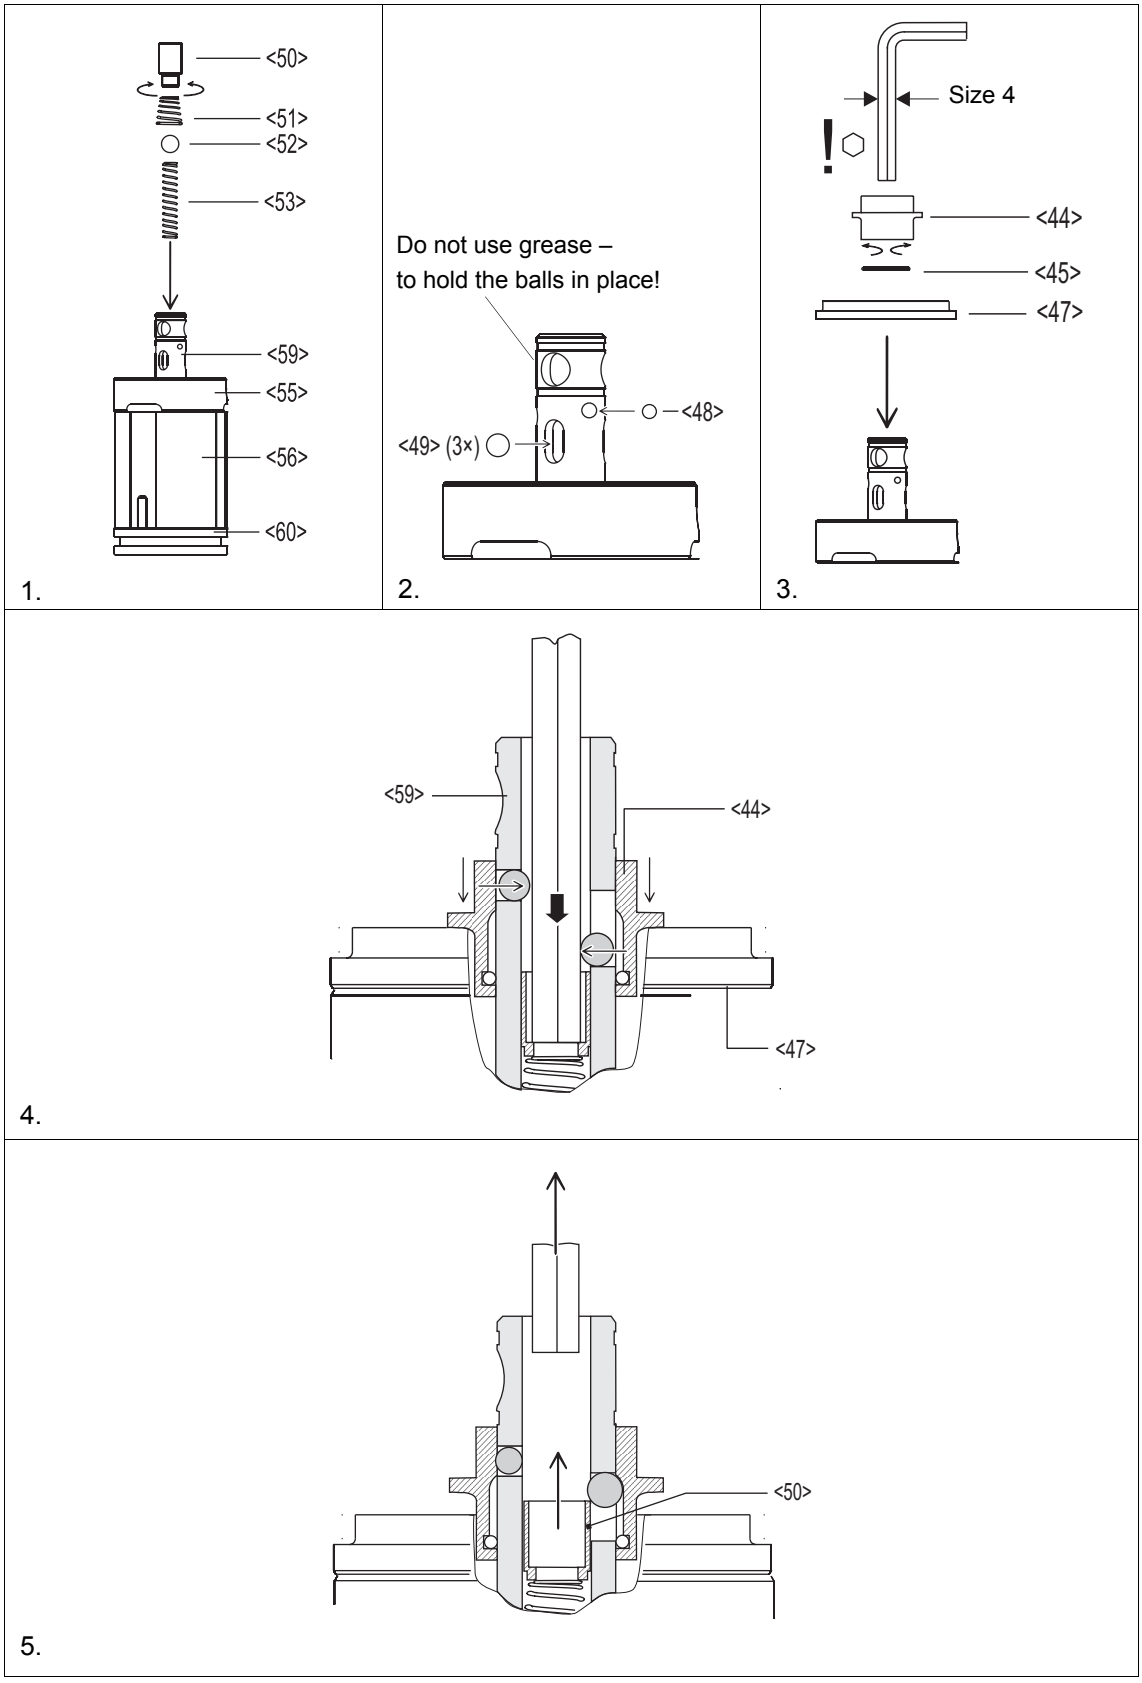

7.4.3 Assembling the actuating ring

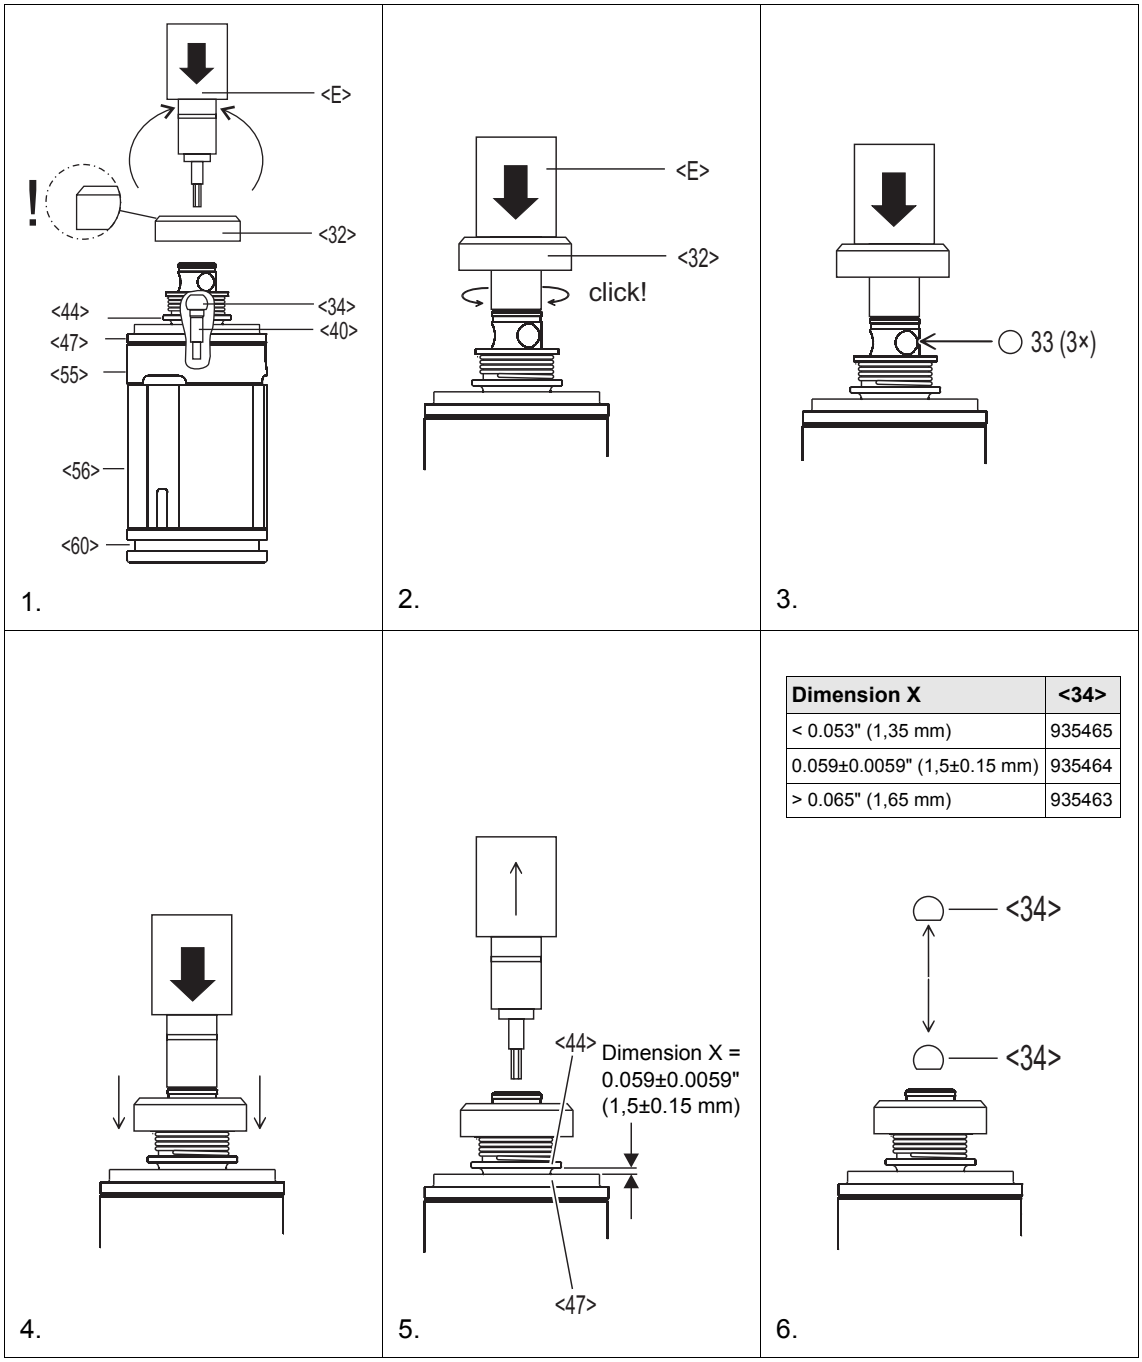

Dimension X	<34>
< 0.053" (1,35 mm)	935465
0.059±0.0059" (1,5±0.15 mm)	935464
> 0.065" (1,65 mm)	935463

7.5 Assembling the pulse unit

NOTE

To prevent damage, lubricate the gaskets and o-rings using grease (order no. 914392) before assembly.

7.5.1 Assembling the hydraulic blades

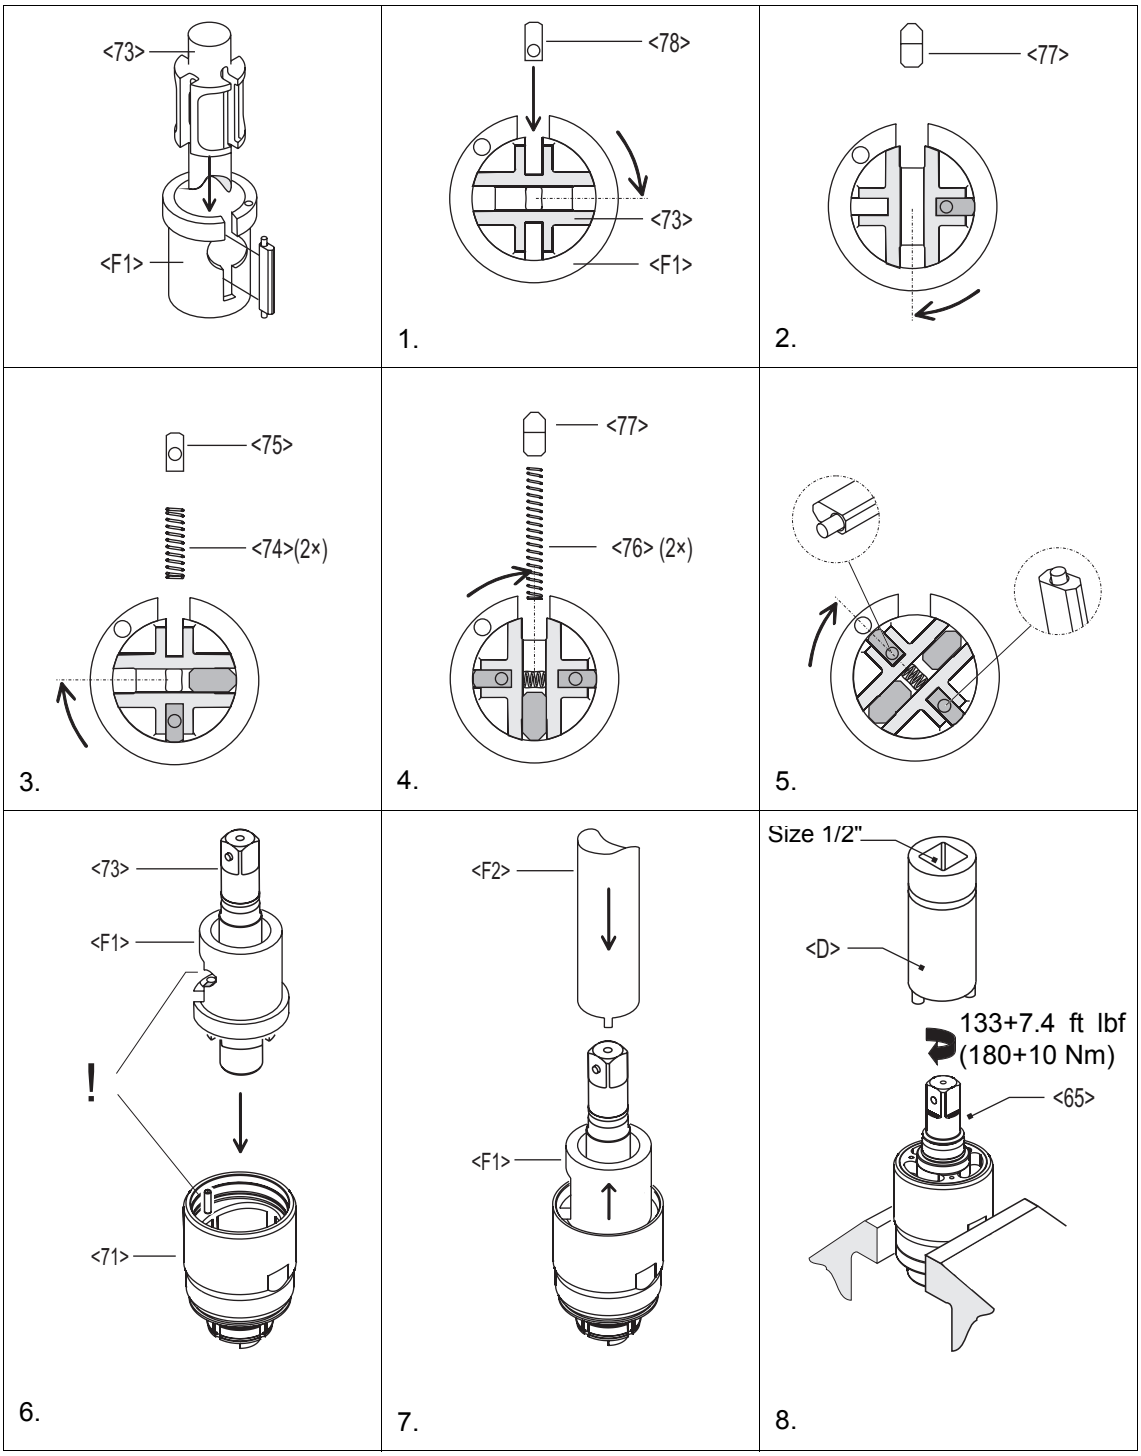

8 Spare parts

Note

Always use only original CLECO replacement parts. Failure to comply with this instruction can result in decreased performance and an increased need for maintenance. Installing replacement parts from other manufacturers will void all manufacturer's warranties.

We would be glad to prepare a special quote for you for spare and wear parts. Please provide us with the following information:

- Tool model
- Number of tools
- Number of rundowns per day or per shift
- Shut-off torque
- Fastening time per rundown

8.1 Pistol grip

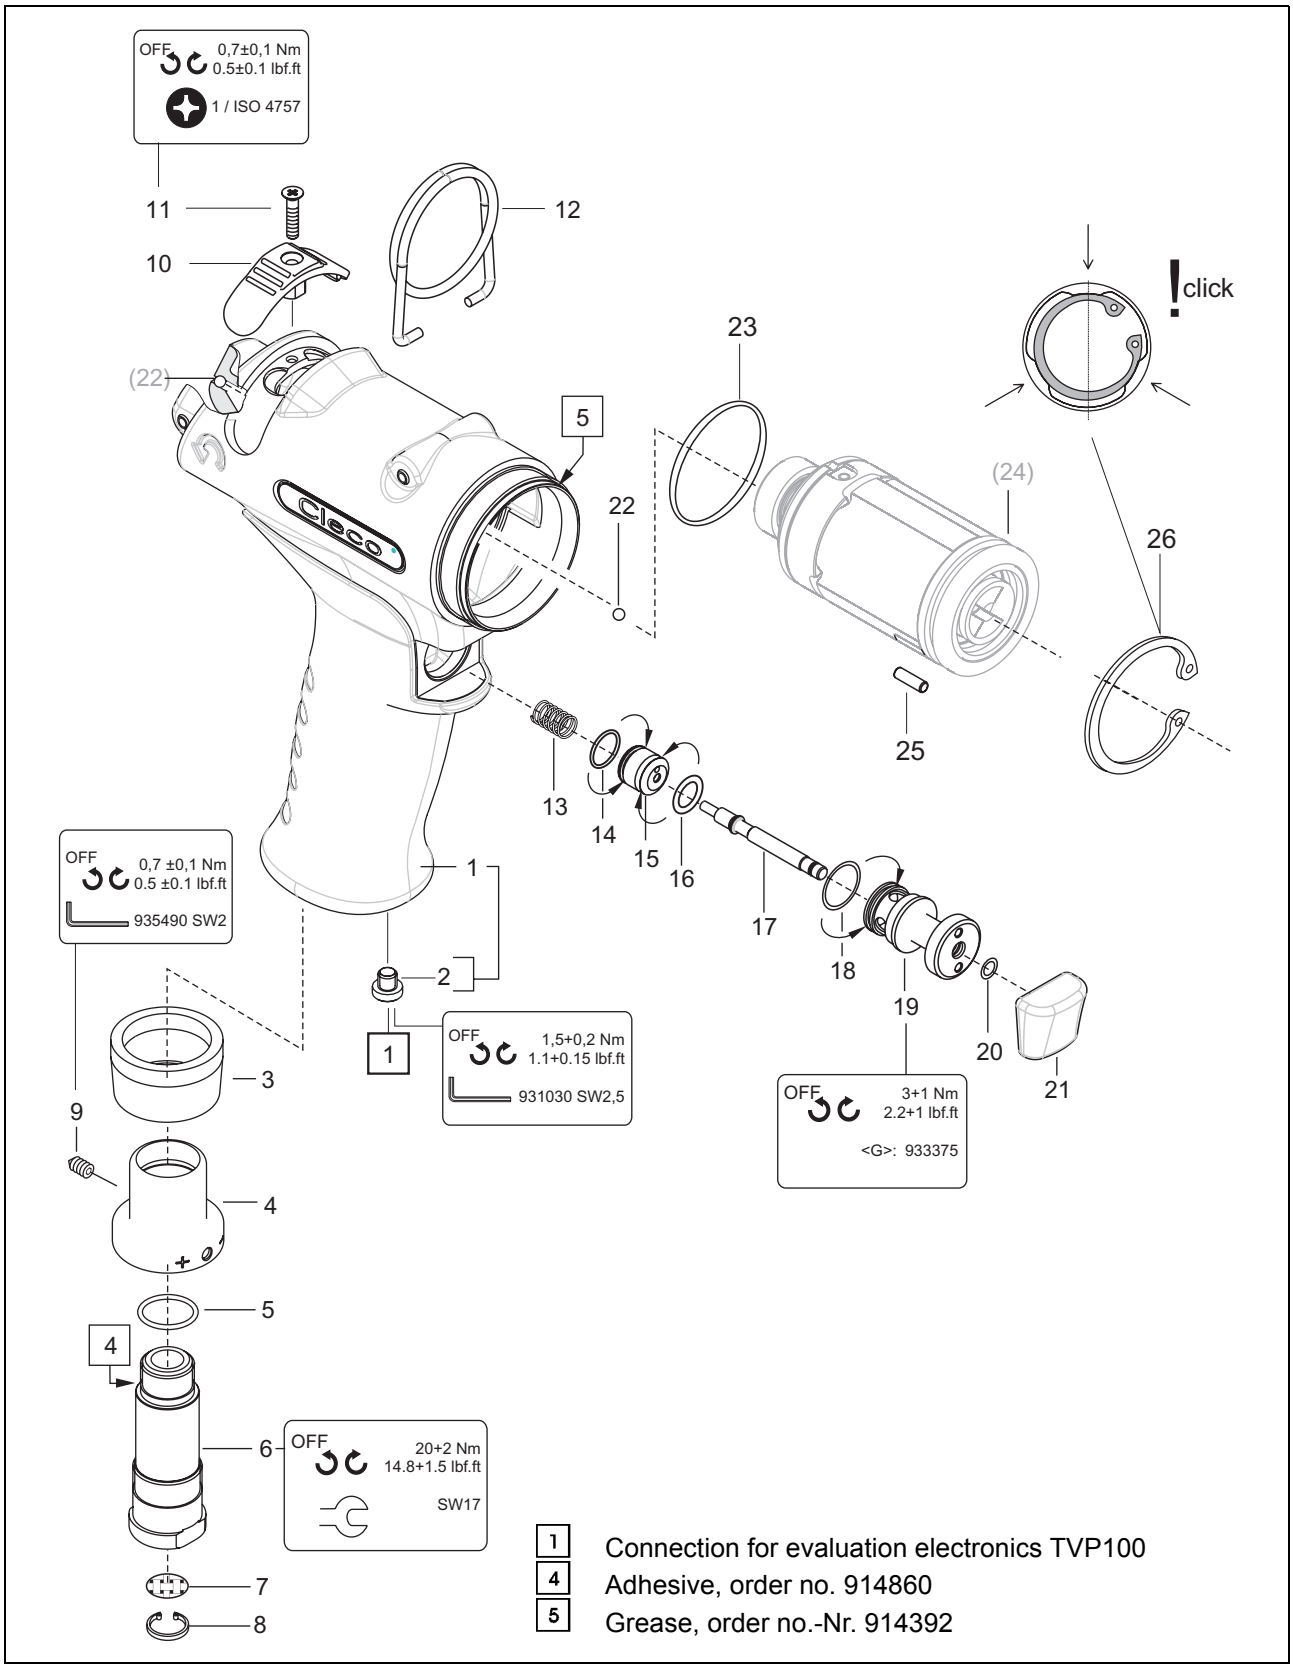

Index	1)	2)	3)	Description	4)
1	935602	1		pistol grip housing asm.	
2	934917	1		pipe plug	M 5X5
3	935720	1	K1	muffler	
4	935434	1		exhaust air throttle	
5	922660	1	K1	o-ring	16,X1,5
6	935437	1		air inlet	
7	905031	1	K1	screen	
8	905599	1	K1	retaining ring	11,X1, IR
9	S905998	1	K1	set bolt	M 4X4
10	935613	1		reverse button	
11	931792	1		countersunk screw	M 3X 14
12	935442	1		suspension bail	
13	935482	1	K1	compression spring	0,5 X 6,X 23,8
14	539188	1	K1	o-ring	9,X1,
15	935441	1		piston	
16	504970	1	K1	o-ring	7,65X1,78
17	935440	1		control push rod	
18	912150	1	K1	o-ring	12,X1,
19	935439	1		plug	
20	905086	1	K1	o-ring	4,X1,
21	935446	1		push-button	
22	911315	1	K1	ball	3,000MM
23	903764	1	K1	o-ring	41,X2,
24	935635	1		motor unit	
25	916772	1	K1	needle roller	3,X9,8
26	917815	1	K1	retaining ring	45,X1,75IR

1)Order no.
2)Quantity
3)Part of motor service kit K1, order no. 935655
4)Dimesions

8.2 Motor unit 935635

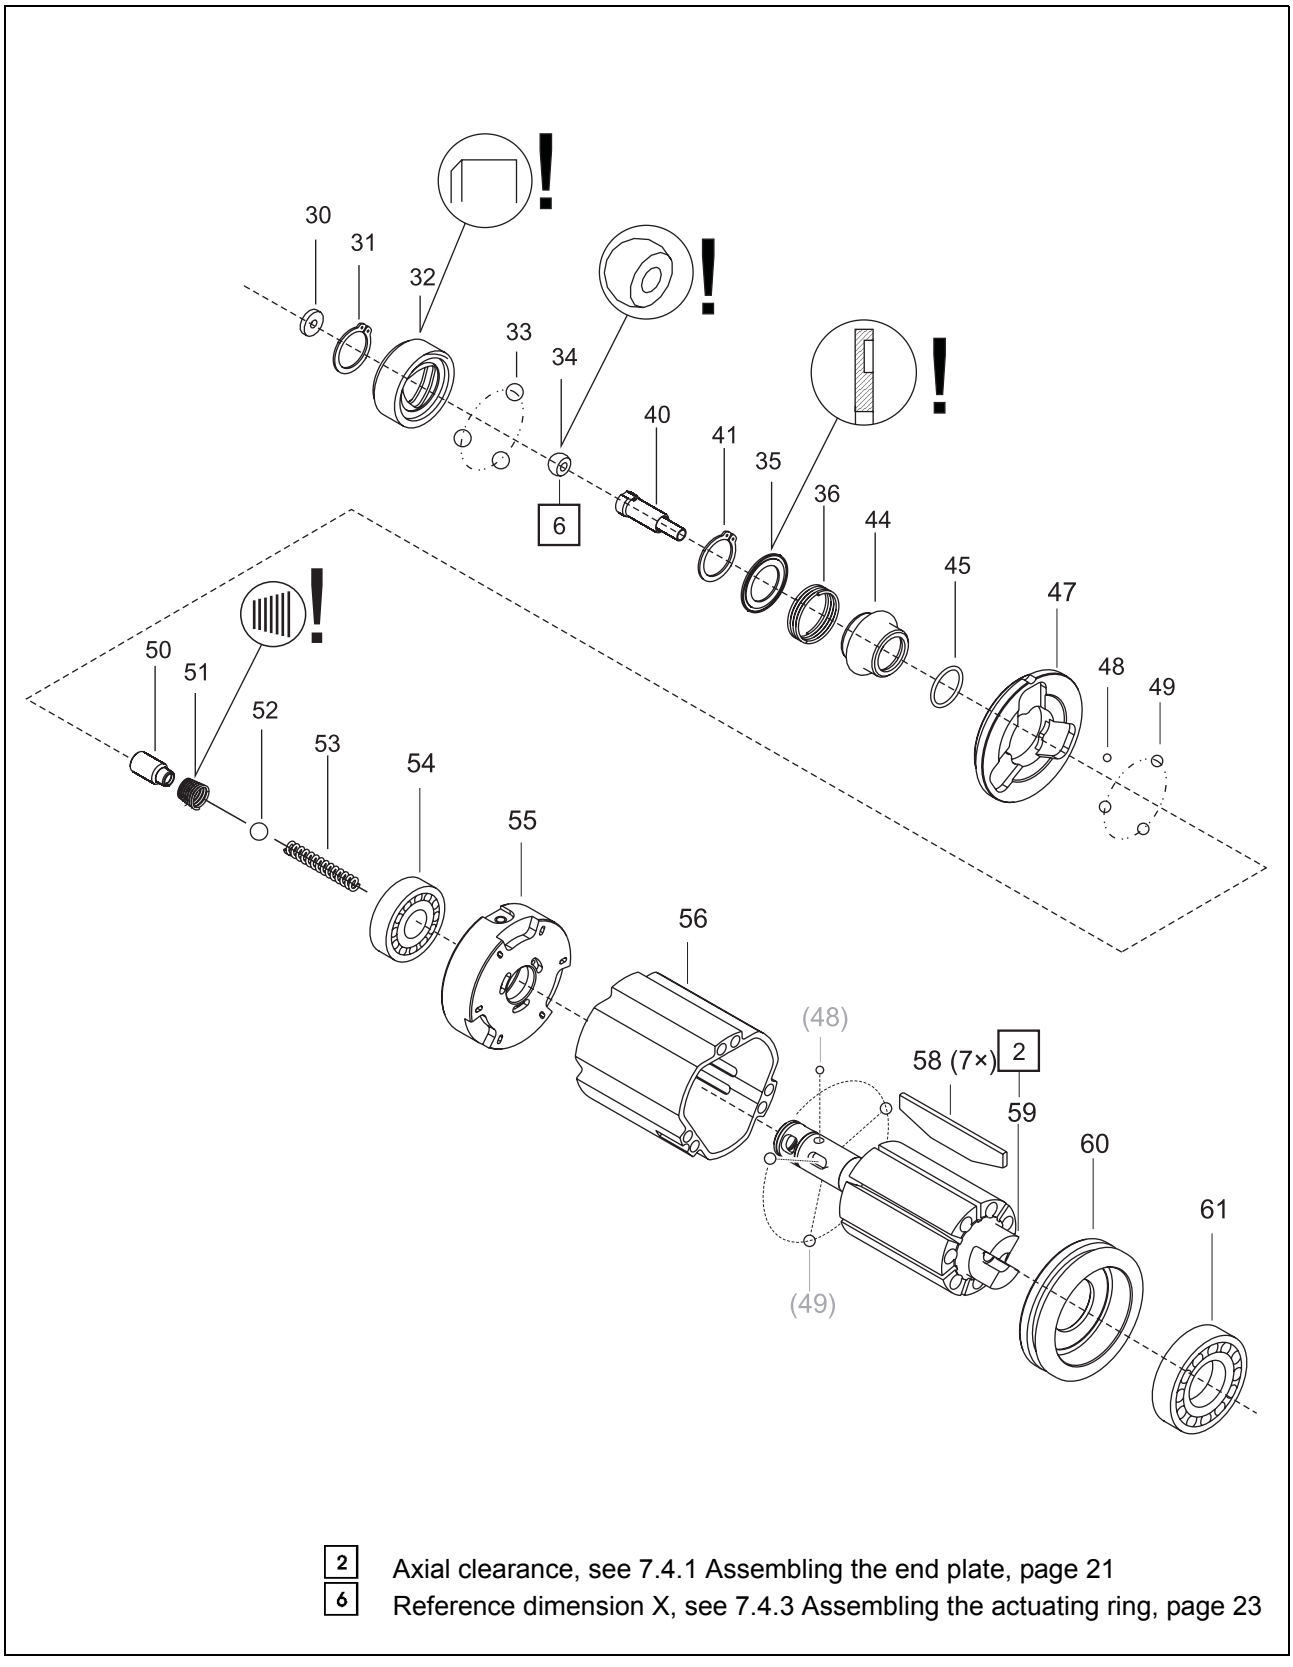

2 Axial clearance, see 7.4.1 Assembling the end plate, page 21
6 Reference dimension X, see 7.4.3 Assembling the actuating ring, page 23

Index	1)	2)	3)	Description	4)
30	935479	1	K1	washer	7,1 X 2,4 X 1,5
31	902862	1	K1	retaining ring	10,X1, AR
32	935443	1		actuating ring	
33	935405	3	K1	ball	4,76MM (3/16")
34	935463	1	K1	ball sleeve 3,8	Ø6 × 3,8MM
	935464	1	K1	ball sleeve 3,5	Ø6 × 3,5MM
	935465	1	K1	ball sleeve 3,2	Ø6 × 3,2MM
35	935404	1	K1	washer	
36	935451	1	K1	compression spring	0,7 X 14,5 X 17,
40	935491	1		torque adjustment screw asm.	
41	902862	1	K1	retaining ring	10,X1, AR
44	935431	1		shut-off piston	
45	926570	1	K1	o-ring	10,X1,
47	935614	1		air distributor	
48	917793	1	K1	ball	2,500MM
49	911315	3	K1	ball	3,000MM
50	935444	1		sleeve	
51	935450	1	K1	compression spring	0,53X 5,27 X 13,5
52	917794	1	K1	ball	4,500MM
53	935498	1	K1	compression spring	0,85X 3,5X 26,
54	926565	1	K1	ball bearing	10,X 22,X 6,
55	935624	1		rotor cover	
56	935630	1		rotor cylinder	
58	935627	7	K1	blade	L30,01 D1,5 H 9,5
59	935628	1		rotor	
60	935621	1		rotor cover	
61	915832	1	K1	ball bearing	17,X 30,X 7,

1)Order no.
2)Quantity
3)Part of motor service kit K1, order no. 935655
4)Dimesions

8.3 Pulse unit

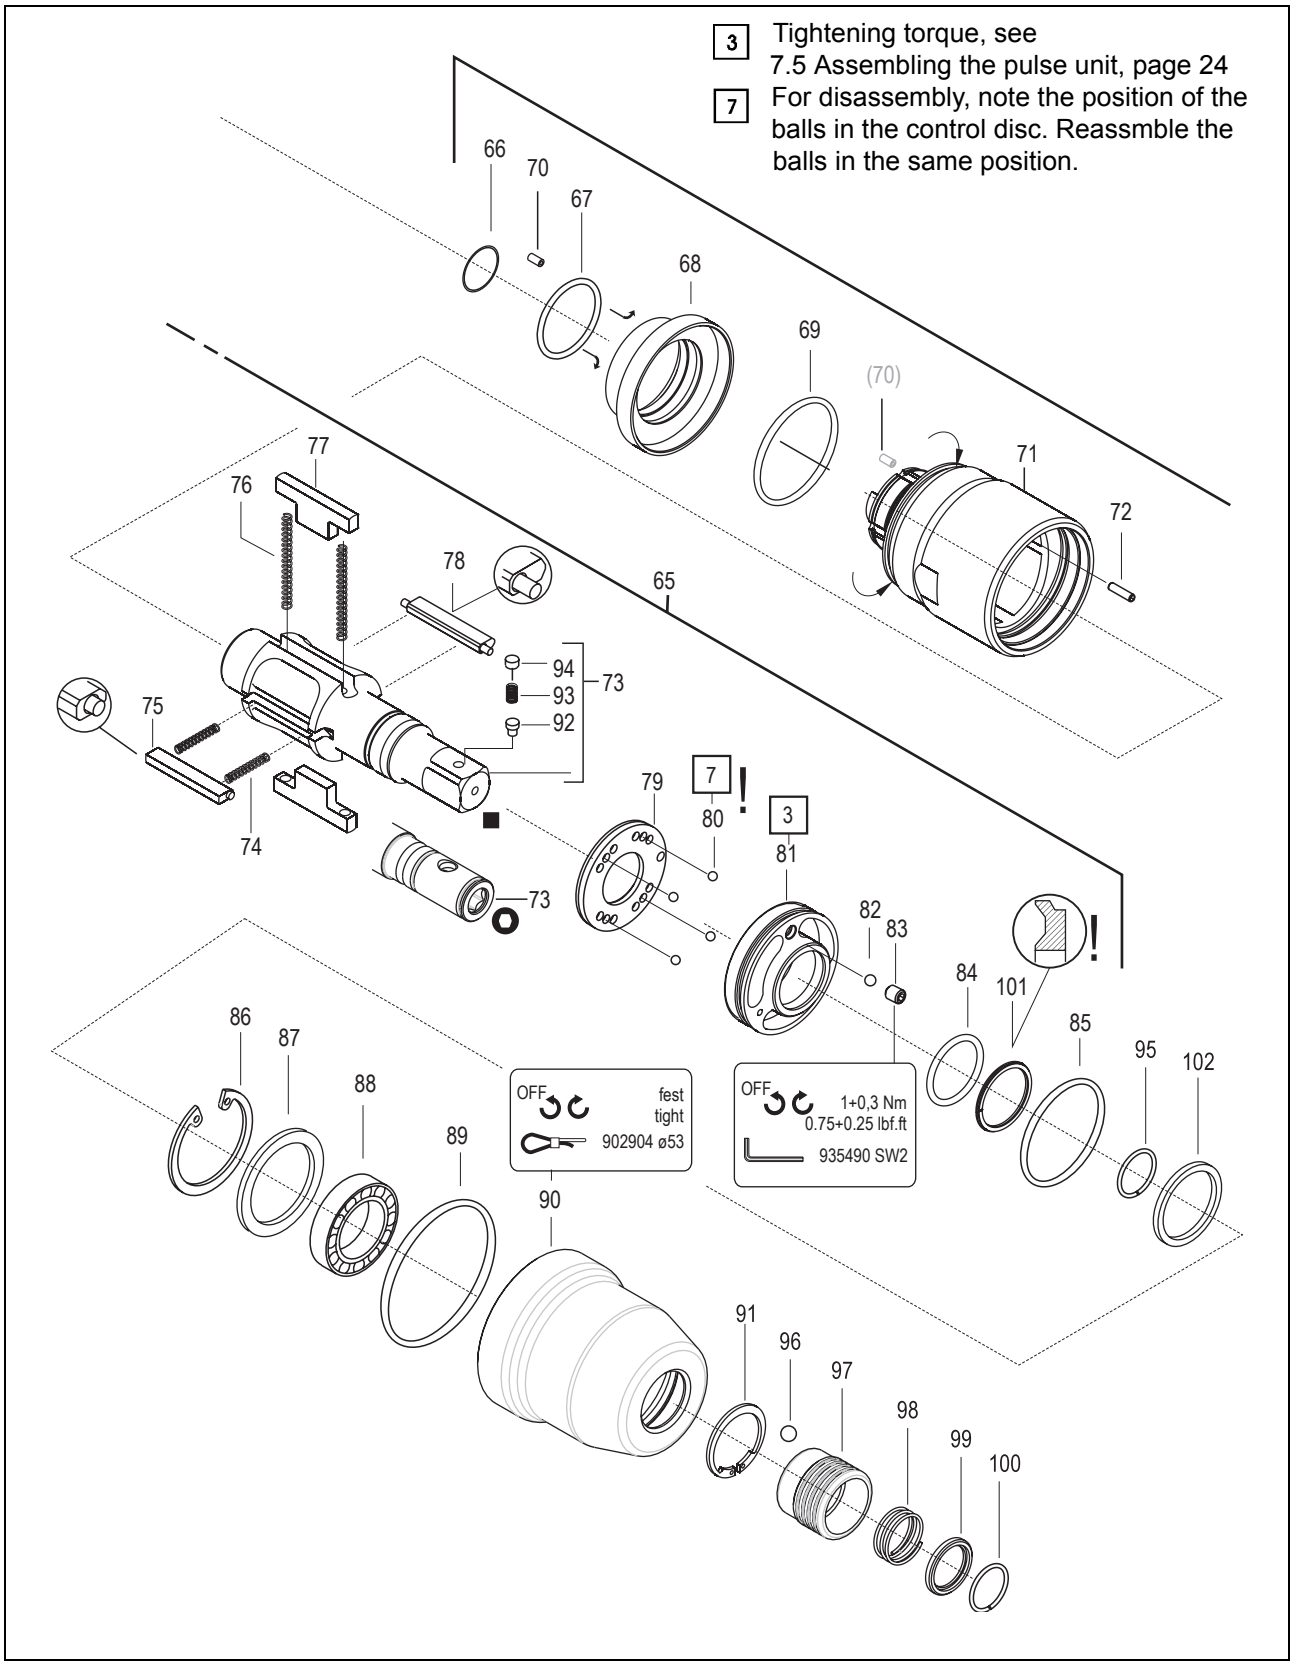

Index	1)	2)	3)	Description	4)
65	*	1		pulse unit	
66	921623	1	K2	o-ring	22 × 1,5
67	922645	1	K2	o-ring	28 X1,5
68	935622	1		equalizing piston	
69	916809	1	K2	o-ring	40,X1,5
70	935652	1	K2	sleeve	
71	935960	1		hydraulic cylinder asm.	
72	916772	1		needle roller	3, X9,8
73	*	1		hydraulic rotor asm.	
74	935631	2	K2	compression spring	0,36 X 2,5 X 26,2
75	935616	1		control blade asm.	
76	935632	2	K2	compression spring	0,43X 2,8 X 51,8
77	935615	2		hydraulic blade	
78	935618	1		control blade asm.	
79	935612	1		control disc	
80	917793	8	K2	ball	2,500MM
81	935608	1		bearing ring	
82	911315	1	K2	ball	3,000MM
83	919140	1	K2	set bolt	M4X5
84	S909126	1	K2	o-ring	20,X2,
85	935646	1	K2	o-ring	38,X1,5
86	902106	1	K2	retaining ring	33,X1,2IR
87	935633	1		washer	25,0 X 31,8 X 1,0
88	921414	1	K2	ball bearing	20, X 32, X 7
89	935647	1	K2	o-ring	52,X1,5
90	935626	1		housing	
91	933818	1	K2	retaining ring	20,X1,2 AR
92	914433	1		plug	
93	9D6481	1		compression spring	0,3 X 3,2 X 9,2
94	26989	1		pin	
95	935651	1	K2	retaining ring	18, X1,2 AR
96	*	1	K2	ball	6,000
97	*	1		sleeve	
98	*	1	K2	compression spring	1,2 X 22, X 33,4
99	*	1		ring	
100	*	1	K2	retaining ring	18, X1,2 AR
101	935725	1	K2	supporting ring	
102	935644	1		ring	

1)Order no.
2)Quantity
3)Part of hydraulic service kit K2, order no. 935656
4)Dimesions

*

Order no.		<65>	<73>	<96>	<97>	<98>	<99>	<100>
80PTHD604	■	935641	935600	–	–	–	–	–
80PTHD60Q	O	935640	935961	903231	935634	935648	935649	935651

8.4 Equipment order list

Index		1)	Description
A		928478	Oil filling device
	A1	928483	Oil filling unit
	A2	935718	Joining piece cpl.
B		925730	Syringe
C		938538	Assembly/Disassembly motor unit
	C1	933486	Support
	C2	933483	Semi-monocoque pair
	C3	933480	Punch
	C4	933472	Support 0 mm
	C5	933473	Support 0,02 mm
	C6	933474	Support 0,04 mm
	C7	933475	Support 0,06 mm
	C8	933489	Punch
	C9	933476	Support
D		938504	Assembly/Disassembly pulse unit
E		933498	Assembly actuating ring
F		938531	Assembly hydraulic blade/control blade
	F1	938533	sleeve 80PTHD
	F2	938532	awl
G		933375	key for trigger valve

1)Order no.

9 Technical data

9.1 Dimensions in mm

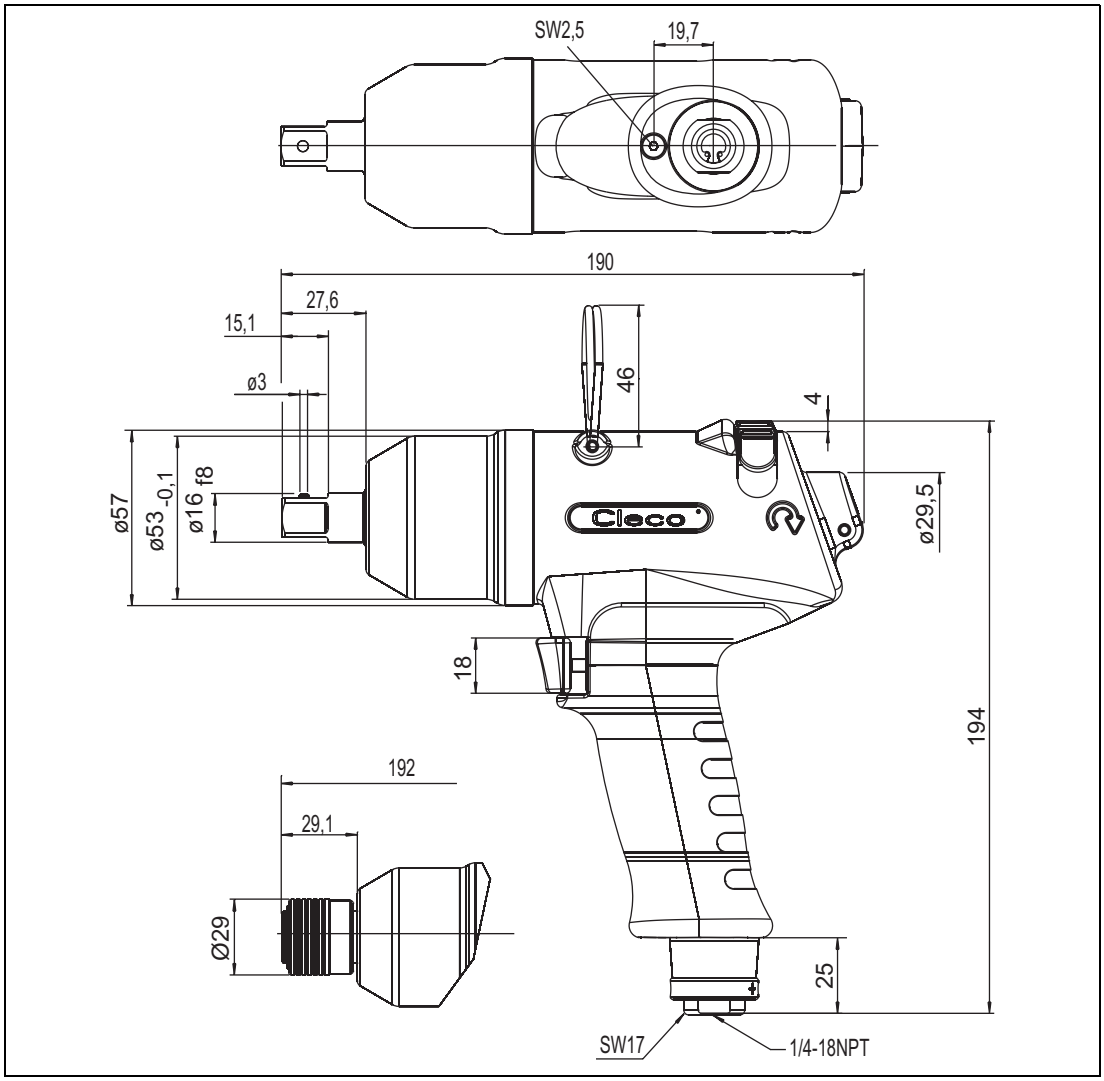

Abb. 9-1

9.2 Performance Data

Order no.		Recommended torque range ft.lbf (Nm) min.	Recommended torque range ft.lbf (Nm) max.	Free speed rpm	10.9 mm	lb (kg)	Air consumption ft³/min (m³/min) Free speed	Air consumption ft³/min (m³/min) Pulses
80PTHD604	■ 1/2"	37 (50)	59 (80)	6000	M10	3.1 (1,40)	26.5 (0,75)	19.4 (0,55)
80PTHD60Q	O 7/16"					3.2 (1,45)		

10 Service

NOTE

If repair is required send the complete 80PTHD… to Cooper Power Tools. It may be repaired only by authorized technicians. If the tool is opened, the warranty is voided.

11 Disposal

CAUTION!

Injuries and environmental damage from improper disposal.
The components and auxiliary materials of a machine incorporate risks to health and the environment.

- ➔ Catch auxiliary materials (oils, greases) when drained and dispose of them properly.
- ➔ Separate the machine parts by material and dispose of them properly.
- ➔ Separate the components of the packing and dispose of them by segregating them clearly.
- ➔ Wear suitable protective clothing at the time of disposal.
- ➔ Follow the general prevailing disposal guidelines.
- ➔ Follow the locally applicable regulations.

Sales & Service Centers

Note: All locations may not service all products. Please contact the nearest Sales & Service Center for the appropriate facility to handle your ser vice requirements.

Dallas, TX
Cooper Power Tools
Sales & Service Center
1470 Post & Paddock
Grand Prairie, TX 75050
Tel: (972) 641-9563
Fax: (972) 641-9674

Detroit, MI
Cooper Power Tools
Sales & Service Center
4121 North Atlantic Blvd.
Auburn Hills, MI 48326
Tel: (248) 391-3700
Fax: (248) 391-6295

Houston, TX
Cooper Power Tools
Sales & Service Center
6550 West Sam Houston
Parkway North, Suite 200
Houston, TX 77041
Tel: (713) 849-2364
Fax: (713) 849-2047

Lexington, SC
Cooper Power Tools
670 Industrial Drive
Lexington, SC 29072
Tel: (800) 845-5629
Tel: (803) 359-1200
Fax: (803) 358-7681

Seattle, WA
Cooper Power Tools
Sales & Service Center
2865 152nd Ave N.E.
Redmond, WA 98052
Tel: (425) 497-0476
Fax: (425) 497-0496

York, PA
Cooper Power Tools
Sales & Service Center
3990 East Market Street
York, PA 17402
Tel: (717) 755-2933
Fax: (717) 757-5063

Canada
Cooper Power Tools
Sales & Service Center
5925 McLaughlin Road
Mississauga, Ont. L5R 1B8
Canada
Tel: (905) 501-4785
Fax: (905) 501-4786

Cooper Power Tools
P.O. Box 1410
Lexington, SC 29071-1410
USA
Tel: 800-845-5629
803-359-1200
Fax: 803-359-0822

Cooper Power Tools
4121 North Atlantic Blvd.
Auburn Hills, MI 48326
USA
Tel: (248) 391-3700
Fax: (248) 391-6295

Cooper Power Tools
de México S.A. de C.V.
Libramiento La Joya No. 1
Bodega No. 2
Esq. Politécnico
Barrio San José
Cuautitlán, Edo de México
C.P. 54870
Tel: +52-55-5899-9510
Fax: +52-55-5870-5012

Cooper Tools Industrial Ltda.
Av. Liberdade, 4055
Zona Industrial - Iporanga
18087-170 Sorocaba, SP
Brazil
Tel: +55-15-3238-3929
Fax: +55-15-228-3260

Cooper Power Tools SAS
Zone industrielle – B.P. 28
77831 Ozoir-la-Ferrière Cedex
France
Tel: +33-1-6443-2200
Fax: +33-1-6440-1717

Cooper Power Tools
GmbH & Co. OHG
Postfach 30
D-73461 Westhausen
Germany
Tel: +49 (0) 73 63/ 81-0
Fax: +49 (0) 73 63/ 81-222
E-Mail:
sales-de@coopertools.com

Cooper Tools Hungária Kft.
Berkenyefa sor 7
H-9027 Györ
Hungary
Tel: +36-96-505 300
Fax: +36-96-505 301

Cooper (China) Co., Ltd.
955 Sheng Li Road,
Heqing Pudong, Shanghai
China 201201
Tel: +86-21-28994176
+86-21-28994177
Fax: +86-21-51118446

www.cooperpowertools.com

Cooper Industries, Ltd.
600 Travis, Ste. 5800
Houston, TX 77002-1001
Tel: 713-209-8400
www.cooperindustries.com

COOPER Power Tools

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. © 2008 COOPER INDUSTRIES, INC.